# Limited Lifetime FaucetWarranty

fluid<sup>™</sup> war rants its faucets to be free from defects in material and workmanship for as long as the original consumer purchaser owns his or her home. \* This warranty applies only in original installation location. If a defect is found in normal residential use, fluid <sup>™</sup> will, at its election, repair, provide a replacement part or product, or make an appropriate adjustment. fluid reserves the right to examine the product in question and its installation prior to replacement. This warranty is limited to replacement of defective parts only. Damage to a product caused by misuse, abuse, neglect, accident, improper installation, improper care of finishes, hard water or mineral deposits, potassium or salt based water softener systems or exposure to corrosive materials are not covered by this warranty. Improper care and cleaning will void the warranty.\*\* Replacement parts can be obtained from your local dealer or directly from the fluid <sup>™</sup>warehouse. Shipping charges may apply. Dated proof of purchase must accompany all warranty claims. This warranty applies only to fluid <sup>™</sup> faucets installed in the United States of America, Canada or Mexico (North America). fluid <sup>™</sup> recommends using a certified plumber for faucet installation and repair. Incidental and consequential damages, labor charges, repair or replacement costs are expressly excluded. In no event shall the liability of fluid <sup>™</sup>exceed the purchase price of the faucet. Some states and provinces do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation may not apply to you. This warranty gives you specific legal rights which vary from state/province to state/province. If you find any such problem with your product, please immediately contact your nearest fluid <sup>™</sup>dealer or sales representative.



For additional assistance Toll Free: 1800 460 7019 Fax: 1604 430 5050 www.fluidfaucets.com

- \* Two year warranty on commercial applications.
- \*\*\* N ever use cleaners containing ab rasive cleansers, ammonia, bleach, acids, wa xes, alcohol, solvents or other products not recommended for surface finishes. This will void the warranty.

This faucet meets or exceeds the following standards: ASME A112.18.1/C SA B125.1/NSF61-9/EPA Watersense AB1953 California Lead Plumbing Law Certified This product has been tested and certified by IAPMO.











# Installation Instructions for Single Lever Lavatory Faucet


# **Tools Required for Installation**



Teflon Tape



Adjustable Wrench

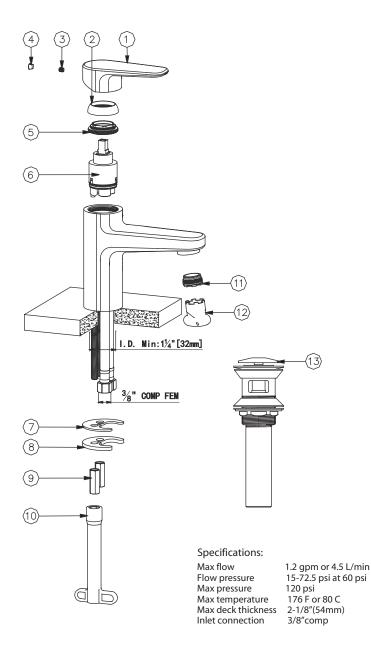

## Installation Instructions

- 1. Shut off cold and hot water supplies.
- 2. On mounting surface the faucet hole should be 1-1/4" (32 mm) in diameter.
- 3. Place faucet body on the mounting surface by feeding braided flex hoses through faucet hole.
- From below, fit rubber washer (#7) and mounting plate (#8) by sliding them over mounting bolt(s).

- Screw mounting nut(s) (#9) onto mounting bolt(s), and tighten using the enclosed socket wrench (#10).
- Connect braided flex hoses to angle stops.
   Extra braided flex hoses may be needed and can be purchased at the local plumbing store if the supplied flex hoses are not long enough.
   Use Teflon tape at the threaded connections.
- 7. Please follow the enclosed instruction for push type drain (#13) installation, if the drain comes with this package.

Note: Vandal proof aerator features water saving technology (1.2gpm). Swivel flow direction adjustment by simply pushing the inside of the aerator to direct stream.

# Care & Maintenance Instructions

fluid  $^{TM}$  products are designed and engineered under strict quality standards. Regular and proper care of our products will ensure years of trouble-free service.

### For Cartridge:

- 1. Shut off cold and hot water supplies.
- 2. Use the supplied Allen wrench to push silicon plug (#4) into handle hub and loosen set screw (#3) but do not remove it.
- 3. Pull off handle (#1), unscrew cap (#2) and remove retaining nut (#5) using an adjustable wrench.
- 4. Pull off cartridge (#6) by hand.
- 5. Wash cartridge (#6) with clean running water and ensure that any trapped debris has been removed. Dry and lightly grease all rubber seals (use only NSF approved Silicone grease).
- 6. Replace cartridge (#6), retaining nut (#5) and cap (#2) followed by handle (#1).

### For Aerator:

Regularly remove with the supplied service key (#12) and wash aerator (#11) with clean running and ensure any trapped debris has been removed.

### For Surface Finish:

Clean with a damp cloth and warm soapy water. Then simply rinse off and wipe dry with a soft cloth. Do not use abrasive or harsh cleaners as they may result in finish damage.