 


fluid™



Push Type Easy Clean Drain Installation Instructions

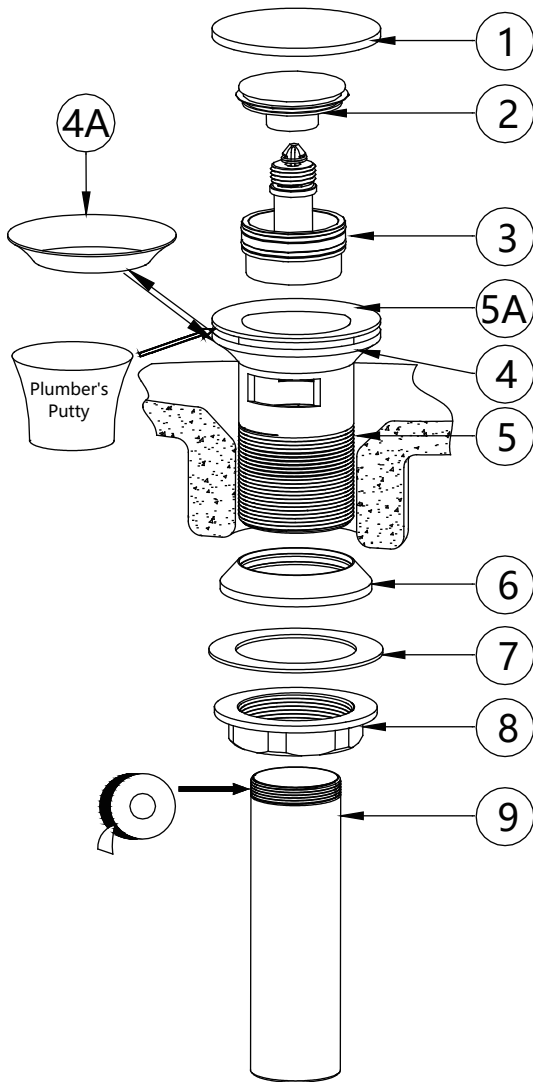

Model #FA726

1. Remove plastic cover (#1).
2. Unscrew tail pipe (#9) from drain body (#5).
3. Remove locknut (#8), friction washer (#7) and black rubber gasket (#6) from drain body (#5).

4. With rubber gasket (#4 or #4A, chosen depending on the slop of drain hole) in place, insert drain body (#5) through drain hole from above. Ensure rubber gasket (#4 or #4A) securely seats inside drain hole.

NOTE: The rubber gasket (#4 or #4A) will work in the majority of installations. However, if there is a large slop or an uneven drain surface it is recommended that the installer should instead run a bead of plumber's putty below the flange (#5A) to achieve a water tight seal.

5. Re-install black rubber gasket (#6), friction washer (#7) and locknut (#8) in order from under the sink.
6. Tighten locknut (#8) until black rubber washer (#6) securely seats inside drain hole. Tighten locknut (#8) with a wrench.
7. Wrap threads of tail pipe (#9) with Teflon tape, then screw tail pipe (#9) to drain body (#5).

Operation Instructions

- Push to raise stopper (#2) to open the drain.
- Push to lower stopper (#2) to close the drain.

Maintenance Instructions

The easy clean basket (#3) feature of this drain ensures that dirt and hair are trapped in the removeable basket, preventing clogs further down the drain line. Frequent cleaning of the basket (#3) will keep the drain opening clear and ensure a longer service life for this products. To clean basket:

1. Pull stopper (#2) straight up to remove basket (#3).
2. Remove any dirt or hair that has accumulated in basket (#3).
3. Rinse basket under clean water and replace basket (#3)
4. Re-place basket (#3) along with stopper (#2) into the drain body (#5).

Need Help?

For additional assistance
Toll Free: 1 800 460 7019
Fax: 1 604 430 5050