



Dual Flush Side Lever Handle Installation Instructions

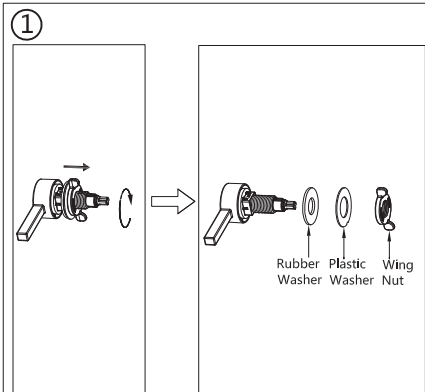

Rubber Washer
Plastic Washer
Wing Nut


Remove the wing nut by turning in a clockwise direction. Remove the white plastic washer and the black rubber washer.

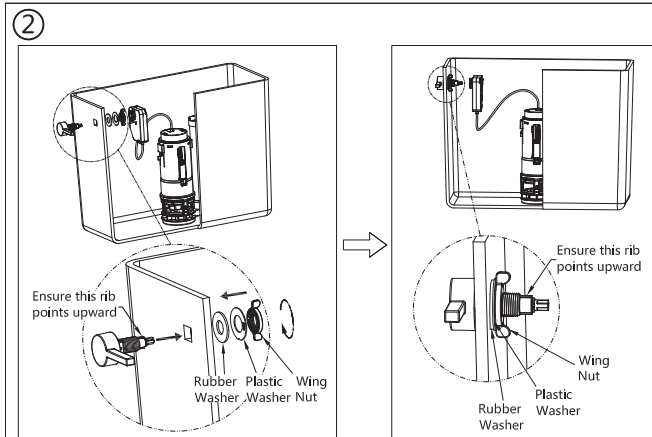

Ensure this rib points upward

Rubber Washer
Plastic Washer
Wing Nut

With the handle lever pointing towards the front of the tank, insert the handle assembly into the square hole in the tank wall. Place the black rubber washer and then the plastic washer over the handle assembly and then tighten the wing nut by hand.

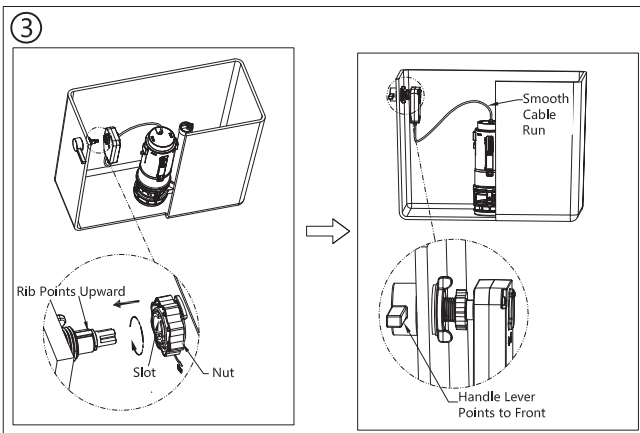

Rib Points Upward


Slot

Nut

Smooth Cable Run

Handle Lever Points to Front

Connect the cable box to the side lever handle by aligning rib on the handle assembly with the slot on the cable box outer nut. Turning counter-clockwise, tighten the nut by hand or with a hand tool. NOTE: When attaching the cable box, ensure the cable does not interfere with the operation of the inlet valve.

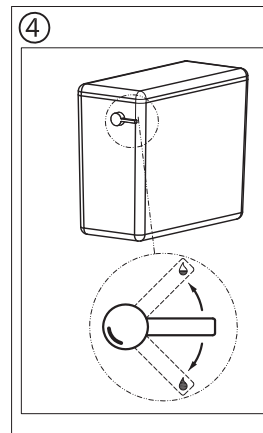

To operate, push the side lever downwards for a full flush. Pull the side lever upwards for a reduced flush.