




What do I do if the enclosed hardware doesn't work to install my fluid accessory?

The hardware included with fluid accessories is intended to be used for wood or wood-backed drywall or solid surfaces. If you are installing on hollow drywall, these screws are not suitable. It is recommended that you either install a wood backing in the appropriate area, or as an alternative you could purchase 'molly bolts' as pictured below and follow their instructions. In some cases the spacing between holes on our faceplates may only accommodate using one molly bolt, but we have found that this is generally enough to secure the fixture.

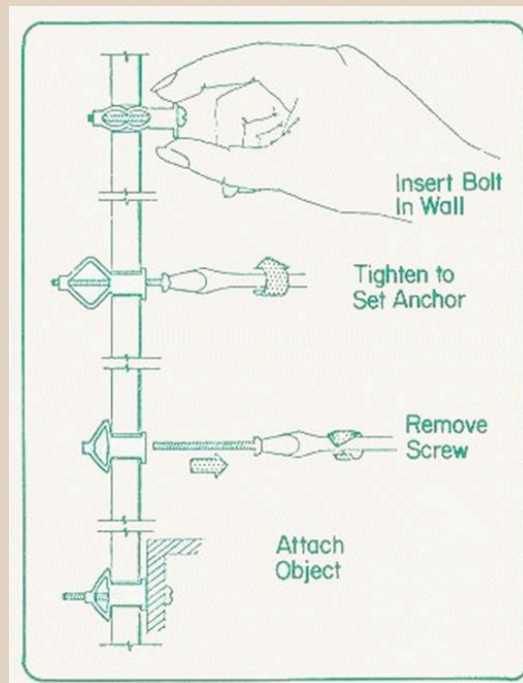

fluid



INNOVATIVE FIXTURES FOR LIFE

