CAROMA INVISI SERIES II WALL HUNG FAQ'S

Cube Invisi™ Series II

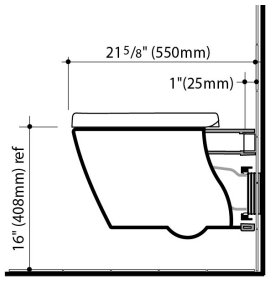

Somerton Invisi™ Series II

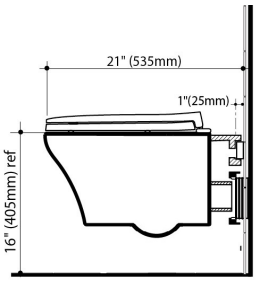

* AT WHAT HEIGHT IS THE WASTE OUTLET SET?

The waste outlet is set at 8 1/4" C/L from finished floor level to have the bowl height at 16" or the Seat Height at 17".

* WHAT SHOULD THE SPACE BE BETWEEN THE WASTE PIPE AND THE WATER INLET PIPE?

6 1/4"

* WHAT STUD HOLES DO I USE WHEN I ROUGH-IN THE INVISI?

The holes marked #3 are used for both the Invisi CUBE and Invisi Somerton bowls. This allows a 7 1/8" centre for the studs.

Note: Discontinued Invisi Walvit bowls used the #1 holes and allowed for a 7 7/8" Centre

* HOW SHOULD THE WALL BE FINISHED?

Invisi bowls MUST be mounted on a solid surface, non-compressable wall. Drywall must never be used as a backer board as that boarding will compress once weight is placed on the bowl. As a minimum requirement cement board must be installed around the entire area where the bowl will make contact with the wall.

* WHAT IS THE SIZE OF THE OUTLET PIPE?

The outlet pipe is 3 1/2" OD, (the same as 3" Cast Iron, ABS and PVC). Connect the waste pipe to the plumbing drainage system by using a flexible rubber coupling with gear clamps, (such as a Fernco style coupling), 3 X 3 for 3" waste pipe connections or 4 x 3 for a 4" waste pipe connection.

* HOW FAR AWAY FROM THE INVISI CARRIER CAN I MOUNT REMOTE BUTTONS?

The remote buttons can be no further than 13 feet (4 M) from the carrier, ensuring of course that there is access at the rear of the buttons for servicing. A second access needs to be provided for the tank when remote buttons are used.

CAROMA INVISI SERIES II WALL HUNG FAQ'S

*** WHAT SIZE WALL IS REQUIRED FOR AN INVISI INSTALLATION?**

The Invisi bracket will fit into a standard 2' X 4' wall if venting is done below the floor but requires a 2' X 6' wall to utilize the top vent connection on the waste pipe supplied. If using this vent connection method, be sure to knock out the centre plug before connecting. Connect the vent pipe to the vent connection on the discharge elbow by using a flexible rubber coupling with gear clamps, (such as a Ferno style).

*** WHAT ARE THE WATER SUPPLY REQUIREMENTS FOR INVISI?**

A dual purpose fitting is supplied with the Invisi. It is both threaded on the outside for a female adapter or you can solder 1/2" copper inside the adapter.

*** WHAT IS THE WEIGHT RATING FOR INVISI?**

Invisi is tested for 400 Kg or 881 pounds.

*** HOW MUCH WATER DOES INVISI USE?**

Invisi is another in the Smart series of Caroma dual-flush toilets, using 1.28/0.8 GPF (4.8/3 LPF).

*** WHAT NEEDS TO BE ORDERED?**

For a complete Invisi Series II In-Wall Toilet you will need to order:

- A carrier - (Either a 237061 or 237062, depending on the application
- Toilet Bowl (Choose either the 604300W Cube or the 604100W Somerton)
- Toilet Seat (Choose the 300024W for Cube Easy Close or any Caroma Elongated bowl for the Somerton)